 


INSTRUCTION MANUAL

Model ER887

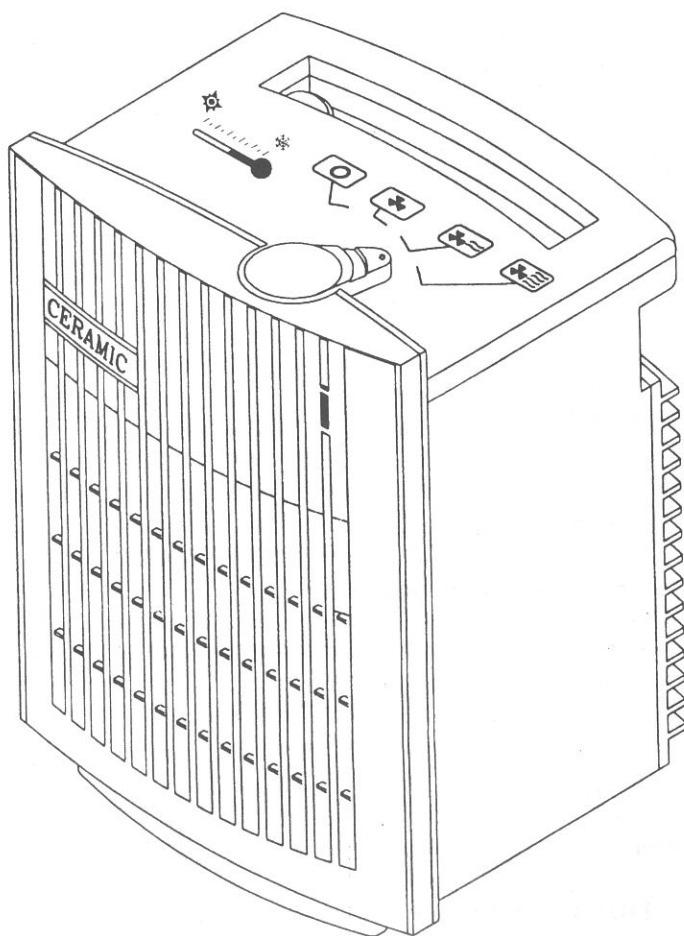

OPERATION INSTRUCTIONS

- (1) POWER OFF
- (2) FAN ONLY
- (3) LOW HEAT (800W)
- (4) HIGH HEAT (1,500W)
- (5) POWER INDICATOR
- (6) REMOVABLE DUST FILTER
- (7) MECHANICAL TIP-OVER CONTROL
TURNS THE HEATER OFF IF IT IS
ACCIDENTALLY KNOCKED OFF
- (8) THERMOSTAT

 
Power Source : 230V - 240V - 50Hz

Power Consumption : 800W/1,500W


(2 OPTION OF WATTAGE ARE AVAILABLE)


Unit Size : 15cm (W) x 12cm (D) x 21cm (H)

Unit Weight : 1.48 kg

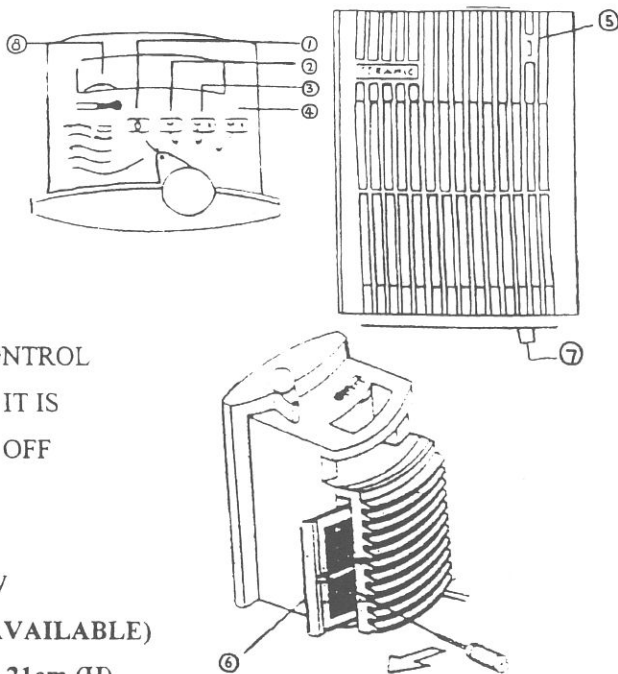

GENERAL OPERATION :

 1. Take off all packing materials, including plastic bag.
2. Turn the power switch to the "  " position (button up).
3. Plug the power cord into an appropriate wall which 10 ampere of electricity supply is necessary (Fig. 1).
4. Turn the power switch to the desire position, then the power indicator lights up.

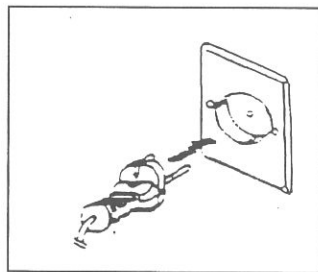



(Fig. 1)

FAN ONLY FUNCTION OPERATION :

1. Turn the power switch to the "  " position.

HEATING FUNCTION OPERATION :

 
1. Turn the power switch to either "  " or "  " position for different heating power level.
2. Turn the temperature control knob clockwise until the heat comes out.
(This pointer position depends on the existing room temperature.)





3. As the room temperature reaches the desired room temperature which has set on the thermostat control, the PTC heating element is off but the fan motor is still working which function is for higher sensitive of room temperature.
4. As the room temperature falls, the PTC heating element releases heat again until the room temperature rise to the position of designation.
5. Desired room temperature is maintained by the above repeated procedure. According to the personal need, you can have a higher or lower room temperature by adjusting the thermostat control knob in clockwise or anti-clockwise direction respectively.

ANTI-FROST DESIGN:

It is applied for the cold living environment where nobody at home and accident may happen owing to low temperature. e.g. The breakage of water pipe in winter. It keeps the room temperature above freezing point all the time.

Operation of the "ANTI-FROST DESIGN"



1. Turn the power switch to the "  " position.
2. Turn the thermostat control knob to "SNOWFLAKE" SYMBOL. (Fig. 2)
3. Turn the power switch to either "  " or "  " position for different heating power level.
4. "ANTI-FROST DESIGN" is functioning. If the room temperature is lower than the freezing point, the heater release heat and maintains the room temperature above the freezing point.
5. In case of very cold existing room temperature, you must turn the power switch to "  " position for having a larger heat output. (If the room space is large, more than one heater are necessary for the usage.)

CLEANING :

1. Before cleaning, turn off the power at (1) and unplug the appliance.
2. Use your pencil tip to slide out the filter at (6)
3. Clean the dust filter with a vacuum cleaner.
4. Dry and re-install the filter.
5. Close the casing with the screw.
6. If the heater has not been used for a long period or has been dusty, it should be checked and cleaned properly.

IMPORTANT SAFEGUARDS

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as drapes and other furnishings, away from heater.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.
4. Always unplug heater when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Do not use outdoors.
7. This heater is not intended for use in wet or moist locations, such as bathrooms or laundry areas. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
9. To disconnect heater, turn controls to off, then remove plug from outlet.
10. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire or damage the heater.
11. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
12. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paints, or flammable liquids are used or stored.
13. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
14. This heater is not intended for use with an extension cord. Plug the cord directly into an appropriate wall receptacle, or If this heater is used with an extension cord, the conduction wire inside the cord should be at least 1mm in diameter and rated not less than 10 AMP.
15. SAVE THESE INSTRUCTIONS.

CAUTION :

- This heater only operates in upright position.
- Do not cover the appliance when operating.
- Store the heater in cool dry location when not in use.
- Do not store until the heater cools down.

WARNING :

- Any other servicing should be performed by an authorized service representative.
- The heater must not be located immediately below a socket-outlet.
- Do not use this heater in the immediate surroundings of a bath, a shower, or a swimming pool.

NOTE: This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliance. By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environment friendly and healthy way.

