

Printing a Mounting Template

NOTICE

It is not recommended that you print a mounting template on your own. Use the template that came in the product box.

If you do print the template, you must follow these instructions for printing a mounting template precisely. To print large templates, you need large enough paper and printer. Failure to have the correct sized paper and printer, or a failure to follow these instructions, may result in an incorrectly sized template and therefore an incorrect cutout (too large or too small) on the mounting surface of your boat.

- 1 Select File > Print.
- 2 Select Actual Size 1 for Page Sizing & Handling.
- 3 Drag the arrow 2 to the right, to view page 2 in the window below.
- 4 Verify that the paper size is larger than the template 3.

In this example, the paper is not larger than the template.

 5 If the paper size is not large enough, select Properties ④ and select a Paper Size that is larger than the template.

NOTICE

Garmin is not responsible for any damages or expenses resulting from a miscut mounting surface arising from a failure to follow these instructions.

Print	×		
Copies: 1 Print in grayscale (bl	lvanced Help (?) lack and white)		
Pages to Print	Comments & Forms Document Summarize Comments		
 ► More Options Page Sizing & Handling ① Size Poster Multiple Booklet ○ Eit ⓒ Actual size ① 	Document: 16.1 x 11.4in 11 x 8.5 Inches		
 ○ Shrink oversized pages ○ Custom Scale: 100 % □ Choose paper source by PDF page size ☑ Print on <u>b</u>oth sides of paper ④ Flip on long edge ○ Flip on short edge 			
Orientation: (a) Auto po <u>t</u> trait/landscape (b) Portrait (c) Landscape Page Setup	< Page 2 of 2 Print Cancel		

-		195 mm (7 11/16	")		
		FUSION® Stereo Retrofit Template		.58 mm (2 9/32")	
	October 2019	© 2019 Garmin Ltd. or its subsidiaries	Printed in Taiwan	190-02629-05_0A	_