

## **Printing a Mounting Template**

## NOTICE

It is not recommended that you print a mounting template on your own. Use the template that came in the product box.

If you do print the template, you must follow these instructions for printing a mounting template precisely. To print large templates, you need large enough paper and printer. Failure to have the correct sized paper and printer, or a failure to follow these instructions, may result in an incorrectly sized template and therefore an incorrect cutout (too large or too small) on the mounting surface of your boat.

- 1 Select File > Print.
- 2 Enter 2 in Pages to Print 1.
- 3 Select Actual Size 2 for Page Sizing & Handling.
- 4 Verify that the paper size is larger than the template **3**.

In this example, the paper is not larger than the template.

- 5 If the paper size is not large enough, select Properties 4 and select a Paper Size that is larger than the template.
- 6 After printing the template, use a ruler to measure at least one dimension line to ensure the template printed to 100% scale.

rint	4			>
Printer Printer Name	Properties	Advanced		Help 🕐
Copies: 1	] Print in graysca	le (black and white)	Save ink/toner (	D
Pages to Print All O Current @ Page. More Options		Document: 13	3.2 x 9.8in	
Page Sizing & Handling ①		11 x 8.5	Inches	
Size Poster Multiple	Booklet	3	aunorit. All	
<ul> <li>○ Fit</li> <li>② ● Actual size</li> <li>○ Shrink oversized pages</li> <li>○ Custom Scale:</li> <li>□ Choose paper source by PDF page size</li> </ul>	%			≈—— ₽
Orientation: Auto OPortrait OLandscape		-24		A Control of Control o
Comments & Forms				
Document ~ Summarize	Comments	<		>
			Page 1 of 1 (2)	
Page Setup			Print	Cancel

NOTICE

Garmin is not responsible for any damages or expenses resulting from a miscut mounting surface arising from a failure to follow these instructions.

